Oil Filler Cap Fitting Guide (MPW-SVG-0163-02)

1, Thoroughly clean the area around the existing Filler Cap.
2, Loosen and remove the existing Filler Cap. Leave in a safe place for any future use.
3, Smear a small amount of oil on the O-Ring of the New Filler Cap.
4, Insert the Security Key into the new Filler cap and screw the Cap into the filler hole in the engine. Tighten hand tight to Factory specifications.
5, Remove the Security Key and store in a safe place. The Key also comes supplied with a Keyring for added options.
That is, it the install is complete, and you should go for a well-deserved test ride.